



Миксер ручной
HM5021B

Руководство пользователя
User's manual

Thank you for purchasing Accessstyle Hand mixer! Please read this manual carefully and keep it for future reference.

Warning! This user manual contains important safeguards. Household use only.

IMPORTANT SAFEGUARDS

1. This product is not intended for use by children. Keep the product out of the reach of children and pets. Extra caution is necessary when using this appliance near children.

2. Always ensure the product is unplugged from the electrical outlet and allowed to cool before assembling, disassembling, relocating, or cleaning it.

3. Do not leave the product unattended while it is in use. Always unplug the product from the electrical outlet when not in use.

4. Do not immerse the Base, Power Cord, or Plug of this product in water or expose the Power Cord or Plug to water or other liquids.

5. Take proper precautions to prevent burns, fire, or personal or property damage.

6. Do not attach attachments not recommended or sold by the product manufacturer. Attachments, when furnished, may become hot during use. Allow any attachments to cool before handling them.

7. Do not place on or near a hot gas or electric burner, in a heated oven, or other heated surfaces.

8. Use extreme caution when moving an appliance containing hot food, water, or other liquids.

9. Use the product in a well-ventilated area. Keep at least 4-6 inches of space on all sides of the product to allow adequate air circulation.

10. Use appliance on a table or flat surface.

11. Keep the product away from curtains, wall coverings, clothing, dishcloths, or other flammable materials.

12. Do not plug or unplug the product from the electrical outlet with a wet hand.

13. This product is intended solely for non-commercial, non-industrial, household use in cooking of food for human consumption; do not use the product outdoors or for any other purpose.

14. Do not let cords hang over edge of table or counter where it may be tripped over or pulled.


15. Do not operate the product if it has a damaged or cut Power Cord or plug; if wires are exposed, if it malfunctions, if it is dropped or damaged, or if the Motor Housing is dropped in or exposed to water.

16. This product has no user-serviceable parts.

17. Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform any servicing; take the product to the appliance repair shop of your choice for inspection and repair.

18. Do not put any stress on the power cord where it connects to the product, as the power cord could fray and break.

10

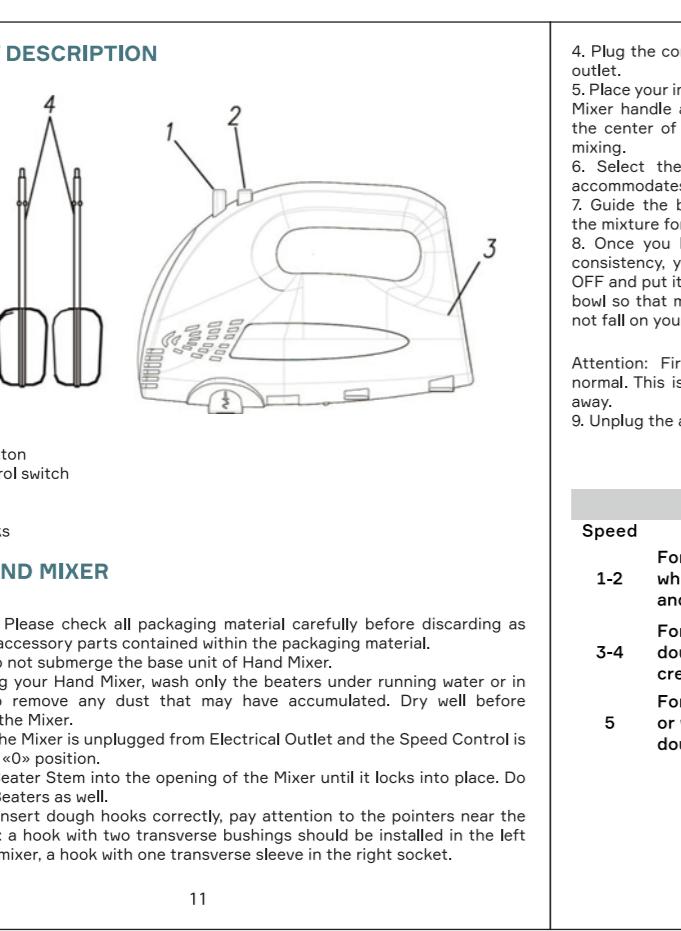

11

PRODUCT DESCRIPTION

4. Plug the cord into a standard electrical outlet.

5. Place your ingredients in a bowl, grip the Mixer handle and position the beaters in the center of the ingredients you will be mixing.

6. Select the speed setting that best accommodates the food you are mixing.

7. Guide the beaters continually through the mixture for a uniform mixture.

8. Once you have reached your desired consistency, you can turn the Control to OFF and let it rest close to the bowl so that mixture on the beaters does not fall on your counter.

Attention: First use may cause a slight odor or small smoking upon heating, it is normal. This is a result of the heating element chemical reaction. It quickly goes away.

9. Unplug the appliance and eject the beaters with the Eject Button into your sink.

MIXING GUIDE

Speed	Description
1-2	For mixing dry ingredients with liquids, folding whipped egg whites and cream into mixtures, stirring gravies and sauces and mashing vegetables.
3-4	For mixing cake mixes, puddings or batters. For using the dough hooks when mixing dough or heavier cake mixes. For creaming together shortening and sugar.
5	For whipping cream, evaporated or powdered milk, egg whites or whole eggs. For mixing minced meat or kneading heavy dough.

USING HAND MIXER

IMPORTANT: Please check all packaging material carefully before discarding as there may be accessory parts contained within the packaging material.

WARNING: Do not submerge the base unit of Hand Mixer.

1. Before using your Hand Mixer, wash only the beaters under running water or in dishwasher to remove any dust that may have accumulated. Dry well before inserting into the base unit.

2. Make sure the Mixer is unplugged from Electrical Outlet and the Speed Control is on the OFF or «0» position.

3. Insert the Beater Stem into the opening of the Mixer until it locks into place. Do this for both beaters as well.

Attention: To insert dough hooks correctly, pay attention to the pointers near the mixer sockets: a hook with two transverse bushings should be installed in the left socket of the mixer, a hook with one transverse sleeve in the right socket.

12

CLEANING YOUR HAND MIXER

WARNING: Always unplug the product and allow it to cool before cleaning or storing it.

NOTICE: Only beaters can be washed in your Dishwasher or under running water.

- Be sure the Speed control is set to OFF and the appliance is unplugged from the electric outlet.
- Eject the beaters onto your sink.
- Wash beaters with hot soapy water or in your Dishwasher. Make sure to dry all parts thoroughly before storing.
- Clean the mixer with a damp cloth.
- Store the beaters in a drawer. Do not wrap the cord around the Mixer.

TECHNICAL SPECIFICATIONS

Type	Hand mixer
Application	Multifunctional
Max Power	500 W
Rotation speed	1300 ± 10% RPM
Motor material	Aluminum, copper
Noise level	≤85 dB
Body material	Plastic
Type of control	Speed switcher
Speed Quantity	5
Quantity of attachments	2 pairs
Additional attachments	Beaters – 2 pcs; Dough hooks – 2 pcs
Ejection button	Yes
Rated Voltage	220-240 V - 50 Hz
Power cord length	1.2 m
Max Dimensions, W*H*D	37*150*218 mm
Net Weight	1.06 kg
Main color	Black

Correct disposal of this product

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle this product responsibly to promote sustainable reuse of material resources

13

ACCESSSTYLE WARRANTY TERMS AND CONDITIONS

1. The warranty terms and conditions set forth below comply with the Russian Federation applicable legislation on consumer goods trading.

2. The warranty period of this Product is 1 (one) year starting from the time of the original purchase.

3. The product's lifetime is 2 (two) years and shall commence at the date of purchase, or during the guarantee period.

4. Defects caused by moisture, dampness, extreme temperature, microwave energy, pressure, hit, influence of animals and insects, liquids, food, dust and chemical entering the product.

4. Product repaired or modified by persons, except those names in paragraph 5.

4. Product, misused or used in violation of the user manual.

4. Defects caused by damage of the product or its accessories.

5. Warranty service shall be performed by duly authorized bodies: authorized service centers listed on Support webpage: <http://www.accessstyle.ru> and available on 8-800-250-07-17. During the warranty period any production defects shall be repaired free of charge upon presenting the filled valid warranty certificate and/or documents indicating the proof of purchase and the date of purchase (cash receipt). The documents shall contain model name of the product, date of purchase, trade organization details. An authorized body shall be entitled to refuse warranty service in case of absence of the required documents.

6. Warranty period shall be extended to the service period. Replacing of parts, components or the whole package shall not result in a new warranty period for the product or for the replaced parts.

7. Under no circumstances shall the Producer, Importer and organizations authorized by the Importer be liable for any direct, indirect, incidental, special or consequential damage or including but not limited to any loss of profit, loss of use of information or data; information or data restoration costs, loss arising out of use or inability to use Accessstyle products resulted in interruption of a commercial, production or other activity.

М. П.
продавца

Проверка качества изделия в моем присутствии произведена,
претензий нет. Изделие в полном комплекте с руководством
пользователя получено с условиями гарантии ознакомлен и согласен.

The quality of product has been checked in my presence, I have no claims, I have obtained the full and complete product. I hereby declare that I have read and agree with the warranty terms and conditions.

Подпись потребителя.

Customer signature.

EAC

ГАРАНТИЙНЫЙ ТАЛОН
WARRANTY CERTIFICATE

При покупке изделия требуйте его проверки в Вашем присутствии и заполнения гарантийного талона. Без предъявления данного талона или его неправильном заполнении претензии по качеству не принимаются и гарантийное обслуживание не производится.

ИНФОРМАЦИЯ О СЕРТИФИКАЦИИ

Наименование: Миксер ручной Accessstyle, модель HM5021B

Производитель: ООО Ф-Плюс Мобайл
Преображенская пл., д.8, этаж 27, пом. LXXVII/1 Москва, Россия.

Производственная площадка: Цыси Лотэк Электрикал Эллайанс Ко., Лтд Ул. Янмай, 351, поселок Хэнхэ, г. Цыси Китай

Страна производств: Китай

Импортёр / Организация, принимающая претензии:
ООО Ф-Плюс Мобайл
Преображенская пл., д.8, этаж 27, пом. LXXVII/1 Москва, Россия.

Телефон горячей линии: 8-800-250-07-17.
Срок гарантии 1 год. Срок службы 2 года.

Актуальный список сервисных центров по адресу: <https://accessstyle.ru/service/>

9

8

7

6

5

4

3

2

1

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130