

# **ELECTRIC HAND TOOL ACCESSTYLE**

## **JIG SAW Model GS-A/800W/SBC**

### **USER MANUAL**



Dear buyer! Thank you for purchasing an Accesstyle brand tool. All our products are manufactured to the highest quality requirements.

We hope that our tool will fully meet your expectations.

For long life, efficient and safe operation, please read this manual carefully and keep it for future reference.

When purchasing a product:

- require checking its operability by trial closing, as well as completeness, according to the delivery set given in this manual;
- make sure that the warranty card is properly executed, contains the date of sale, the stamp of the store and the signature of the seller;

Attention! Power tools are hazardous equipment. To avoid electric shock, fire and/or serious injury you need STRICTLY respect the warnings and instructions. Read all safety warnings and all instructions before operating a power tool. Save all warnings and instructions for future reference

# General Power Tool Safety Warnings

## Work area safety

Keep work area clean and well lit. Cluttered or dark areas invite accidents.

Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.

Keep children and bystanders away while operating a power tool.

Distractions can cause you to lose control and injury.

## Electrical safety

Power tool plugs must match the outlet; check the operability of the cable, plug and socket; in case of failure of these parts, further operation is prohibited.

The double-insulated tools can be used from sockets without a third earth wire. Power tools without double insulation must be connected to a grounded socket.

Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded. If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply that shuts off the power tool in case of a leak. Use of electrician's rubber gloves and special shoes reduces the risk of electric shock.

Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock

Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges and moving parts. Replace damaged cords immediately. Damaged or entangled cords increase the risk of electric shock. When operating a power tool outdoors, use an extension cord suitable for outdoor use.

## Personal safety

Stay alert when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

Dress properly. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts. Keep handles dry, clean and free from oil and grease.

Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source. Carrying power tools with your finger on the switch invites accidents.

Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in the tool damage or serious injury.

Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions

## Power tool use and care

Use clips, adjusting clamps, a vice clamps, or other method to securely hold the workpiece. Holding the part with your hand or body is not secure and could result in loss of control, tool breakage, or injury.

Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed

Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control. Any change or modification is prohibited as this may result in damage to the power tool and/or personal injury.

Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools. Work out a periodic service schedule for your power tool.

Do not use accessories which are not specifically designed and recommended by the tool manufacturer. Just because the accessory can be attached to your power tool, it does not assure safe operation.

## Service

Have your power tool serviced by a qualified repair person in authorized service centers. Maintenance performed by unqualified person may cause tool breakage and injury.

Do not use corrosive chemicals or liquids to clean the body parts. Use of some cleaning agents such as gasoline, ammonia, etc. cause damage to plastic parts.

When servicing a power tool, use only recommended replacement consumables, attachments, and accessories. Use of non-approved consumables, attachments, and accessories may result in damage to the power tool or personal injury.

## EXTRA SAFETY REGULATIONS CONCERNING JIG SAW

Wear ear protectors with impact drills. Exposure to noise can cause hearing loss.

Always wear protective eye wear when using this power tool.

Wear a dust mask if the operation is dusty.

Use clamps or another practical way to secure and support the work piece to a stable platform. Never hold the work by hands or legs. Poor fastening of the piece can cause the tips to deform and result in loss of control of the tool and possible injury.

Never leave the on/off key locked in the "ON" position. Before turning on, make sure the on/off key is in the "OFF" position. Accidental starts may cause injury.

Keep cord away from moving items.

Don't turn on an electric jigsaw that has breakages or defects.

The power cable must be behind the adapter for connecting to the vacuum cleaner during operation.

Wear protective goggles, a respirator, gloves and earmuffs.

It is necessary to connect an electric jigsaw to the vacuum cleaner through a special adapter to ensure dust extraction.

It is strictly forbidden to work with asbestos-containing materials.

In case of a breakdown, contact a service workshop, use only original spare parts and accessories.

Use high quality blades for quality work. The use of blunt, crooked or broken saw blades will overload the motor.

It is forbidden to apply lateral force to the body of the jigsaw during operation.

### BRIEF DESCRIPTION OF THE PRODUCT



1. Variable speed dial
2. Lock-on Button
3. Switch trigger
4. Hex wrench to adjust the angle of the base plate
5. Vacuum port
6. Orbital setting selector
7. Base plate
8. Transparent blade cover
9. Blade quick clamp

## Technical characteristics:

Engine's type	electric, collector
Power type	from the mains 110-220V/50 Hz
Housing material	plastic
Strokes per minute	500-3000 /min
Length of stroke (mm)	8 mm
Number of speeds	6
Lock-on Button	yes
Base plate type	drop forged
Base plate inclination adjustment	yes
Blade cover	yes
Blade fixing	quick clamp
Rated power	800W
Network cable length	2 m
Socket type	VDE socket

### APPLICATION AREA

The electric jigsaw is designed for sawing wooden, plastic, metal blanks with the help of special exchangeable blades.

### POWER SUPPLY

Before starting work, make sure that the mains voltage corresponds to the characteristics indicated on the stickers on the product case. Do not connect the tool to a power supply greater than 240 V.

### OPERATING PROCEDURE

1. To turn on: pull the switch trigger
2. To turn off: release the switch trigger
3. Lock-on Button: To activate the permanent on mode, first press the switch trigger (3), then press the lock-on button (2). To deactivate the permanent on mode, first release the switch trigger (3), then release the lock-on button (2).
4. Adjusting jigsaw speed : The electric jigsaw is equipped with a speed adjusting dial (1). By rotation of the wheel, you change the speed of the saw blade. The higher the number on the wheel, the higher the speed. As a rule, high speed is used for working with soft materials and when using blades with a coarse teeth. For working with hard workpieces, it is recommended to set a low rotation speed and a blade with a fine teeth.
5. To install the blade: Always be sure that the tool is switched off and unplugged before adjusting
  - 1) Open blade quick clamp
  - 2) Insert the blade
  - 3) Close blade quick clamp to fix the blade
6. Base plate inclination adjustment: The base plate can be adjusted from 0-45° either to the left or to the right. To do this, loosen the base plate's screws with a hex key, set the plate at the desired angle and fix the position by tightening the screws.

### SAFETY

To avoid risk of injury, strictly observe the following instructions!

1. The workplace should be clean and tidy. Untidiness in the workplace leads to injury.
2. Do not work in rain or snow, in wet and damp areas, near flammable and explosive objects, liquids and gases.

3. During operation, do not touch grounded objects: pipes, radiators, refrigerators, etc.
4. Do not allow children to operate power tools. This is extremely dangerous!
5. Store in a dry, clean place out of reach of children.
6. Do not overload power tools. Do not apply excessive physical effort.
7. Do not work with excessively large workpieces! Do not attempt to achieve results that exceed the technical and physical specifications of the models.
8. Don't wear bijouterie or jewelry when operating the tool: they can get into the rotating parts of the tool! Clothing should fit snugly to the body! It is recommended to wear rubber gloves and boots if you are working outdoors. If you have long hair, you should wear a headwear.
9. Wear safety glasses!
10. Take care of the safety of the power cable. Do not move the tool by the power cable! Avoid getting oils, sharp or hot objects on the cable!
11. Fix the workpiece in a workbench or with clamps. It's safer than holding it in your hands.
12. Be collected and attentive in the process of work. Watch your posture!
13. Handle the product with care. Keep the handles clean and dry, avoid getting moisture and oils on their surface.
14. In the course of maintenance, for example when replacing sanding disc, it is necessary to disconnect the product from the power supply.
15. Before switching on, make sure that the keys and tools intended for maintenance are removed.
16. It is forbidden to move the product connected to the power supply, keeping your finger on the "On / Off" button. This may lead to accidental activation.
17. If you are working outdoors, you may only use cable extensions designed for outdoor work.
18. Be vigilant and attentive in the process of work. It is forbidden to work with the product if you are tired, sick, or under the influence of alcohol.
19. It is recommended to use only dealer-recommended parts and accessories.
20. In case of a breakdown, it is recommended to contact the service center. Repairs should be carried out by a specialist.

## **MAINTENANCE**

You have purchased a durable and reliable electric jigsaw. Proper use and regular maintenance will prolong the life of the product. Regularly clean the ventilation holes on the body of the electric jigsaw from dirt and dust. Regularly wipe the body parts with a soft cotton cloth. It is forbidden to use various types of solvents to clean the electric jigsaw.

## SERVICE MAINTENANCE

Repair of the tool must be carried out only by qualified personnel at authorized service centers.

ATTENTION! The use of any accessories and attachments, or the performance of any operation other than those recommended in this manual, may result in injury or damage to the instrument.

### ACCESSTYLE TRADEMARK PRODUCT WARRANTY TERMS.

1. All of the following warranty conditions are subject to the current legislation of the Russian Federation governing the sale of consumer goods.
2. The product warranty period starts from the date of original purchase and is 1 (one) year.
3. The service life of the product is 5 (five) years from the date of purchase or, in its absence, from the date of production, conditioned upon a full compliance with the storage conditions and operating rules, as well as the correct assembly and installation of the tool specified in this manual.
4. The warranty does not cover:
  - 4.1. Cables, adapters, accessories, covers, carrying cords, clips, holders of various types, packaging and documentation.
  - 4.2. Normal wear or damage to the outer surfaces of the product.
  - 4.3. Defects caused by moisture, dampness, extreme temperatures, microwave energy, pressure, shock, insects, animals, liquids, food, dust, chemicals.
  - 4.4. A product that has been repaired or modified by persons other than those specified in clause 5.
  - 4.5. A product that was not used for its intended purpose, as well as in violation of the operating rules set forth in the user manual.
  - 4.6. Defects caused by the use of incompatible equipment or accessories.
5. Warranty service is performed by organizations authorized for this - authorized service centers, the list of which is contained on the support page of the website <http://www.accesstyle.ru> and is available by phone 8-800-250-07-17. During the warranty period, the elimination of manufacturing defects is free of charge for the buyer upon presentation of the original completed warranty card and / or documents confirming the fact and date of purchase (cash receipt). Documents must contain the name of the product model, date of sale, details of the trading organization. In the absence of these documents, the authorized organization has the right to refuse warranty service.
6. The warranty period is extended by the maintenance period. The replacement of components, utilities or a complete set of the product does not lead to the establishment of new warranty periods for the entire product and the replaced parts.
7. Under no circumstances shall the Manufacturer, Importer and organizations authorized by him be liable for any special, incidental, direct or indirect damage or loss, including, but not limited to, lost profits, loss or inability to use information or data, costs of restoring information or data, losses caused by interruptions in business, production or other activities arising from the use or inability to use the Accesstyle product.