
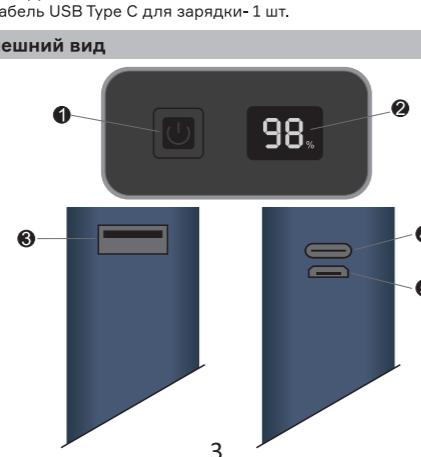


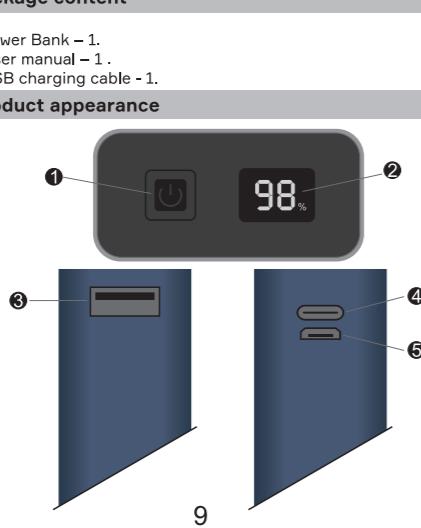

Русский.....	3	Благодарим за приобретение внешнего аккумулятора Amaranth II 10MDQ. Пожалуйста, перед использованием внимательно ознакомьтесь с инструкцией.
English.....	9	Specifications Ампер час: 10000 мАч Лицензия: FCC ID: 2ABH9, IC: 20957A, CE: 20957A Входное напряжение, сила тока: Micro-USB (Type-A) 5V/2A, QC2.0, PD3.0, 9V/2A, 12V/1.5A Выходное напряжение, сила тока: Micro-USB (Type-C) 5V/2A, 9V/2A, 12V/1.5A Максимальная выдачная мощность, Вт: 22.5 Вт Размер, мм: 105x69x24 мм Вес: 250 грамм Время зарядки внешнего аккумулятора: 3.4 x (QC/PD), 5.4 x (стандарт)
Հայերեն.....		Комплектация 1. Внешний аккумулятор - 1 шт. 2. Инструкция - 1 шт. 3. Кабель USB Type-C для зарядки - 1 шт.
Azərbaycan.....		Внешний вид 
ქართველი.....		Зарядка внешнего аккумулятора Подсоедините один конец зарядного кабеля к источнику питания адаптеру*, либо USB порту компьютера, а второй конец к зарядному порту на внешнем аккумуляторе. Для зарядки устройств поддерживает быструю зарядку при наличии кабеля с силой тока выше 2A и поддерживает питание питания устройства. Для зарядки устройств поддерживает быструю зарядку при наличии кабеля с силой тока выше 2A и поддерживает питание питания устройства. Для зарядки устройств поддерживает быструю зарядку при наличии кабеля с силой тока выше 2A и поддерживает питание питания устройства.
Қазақша.....		Зарядка внешнего аккумулятора Для зарядки Ваших устройств от внешнего аккумулятора используйте только оригинальный кабель. Для начала зарядки присоедините один конец зарядного кабеля к источнику питания адаптеру*, либо USB порту компьютера, а второй конец к зарядному порту Вашего устройства (Apple либо Android). Высокие порты устройства поддерживает быструю зарядку при наличии кабеля с силой тока выше 2A и поддерживает питание питания устройства. Для зарядки устройств поддерживает быструю зарядку при наличии кабеля с силой тока выше 2A и поддерживает питание питания устройства.

Thank you for purchasing Amaranth II 10MDQ Power Bank. Please read this manual carefully and keep it for future reference.	Specifications Battery capacity: 10000 mAh Battery type: Li-Polymer Input voltage, current: Micro-USB (Type-A) 5V/2A, QC2.0, PD3.0, 9V/2A, 12V/1.5A Output voltage, current: Micro-USB (Type-C) 5V/2A, 9V/2A, 12V/1.5A Maximum power output, W: 22.5W Size, mm: 105x69x24 Charging time: 3-4 h (QC/PD), 5-6 h (standard) Package content 1. Power Bank - 1. 2. User manual - 1. 3. USB charging cable - 1. Product appearance 	Номер Название 1 Кнопка включения 2 Дисплей 3 USB выход 4 USB Type-C разъем 5 Micro USB вход	Описание Нажмите на кнопку для включения внешнего аккумулятора. Нажмите дальше для выключения внешнего аккумулятора. Чтобы включить зарядку внешнего аккумулятора, нажмите и удерживайте кнопку питания дольше, чем 3 секунды после отсоединения зарядочного устройства.	Включение и выключение внешнего аккумулятора Чтобы включить внешний аккумулятор, нажмите кнопку питания дольше, чем 3 секунды. Для выключения внешнего аккумулятора, нажмите и удерживайте кнопку питания дольше, чем 3 секунды после отсоединения зарядочного устройства.	Отображение заряда аккумулятора Для отображения заряда внешнего аккумулятора он оснащен дополнительным экраном, отображающим заряд и процент от максимальной емкости.	Внимание! Ставьте заряд внешний аккумулятора не заряжая при уровне заряда менее 20%. Когда аккумулятор полностью заряжен, зарядка автоматически прекращается через 55 секунд после отсоединения зарядочного устройства.	Зарядка устройств с помощью внешнего аккумулятора Для зарядки Ваших устройств от внешнего аккумулятора используйте только оригинальный кабель. Для начала зарядки присоедините один конец зарядного кабеля к источнику питания адаптеру*, либо USB порту компьютера, а второй конец к зарядному порту Вашего устройства (Apple либо Android). Высокие порты устройства поддерживает быструю зарядку при наличии кабеля с силой тока выше 2A и поддерживает питание питания устройства. Для зарядки устройств поддерживает быструю зарядку при наличии кабеля с силой тока выше 2A и поддерживает питание питания устройства.	Индикация подключения/отключения Питание данного устройства подается от специального аккумулятора. Применение его не по назначению создает угрозу взрыва, изрыва, а также возможное другие опасные последствия. Не подключайте аккумулятор к зарядному устройству, если не подключите другое устройство. Не подключайте зарядное устройство к аккумулятору, если не подключите его к зарядке.	Примечания по безопасности: Питание данного устройства подается от специального аккумулятора. Применение его не по назначению создает угрозу взрыва, изрыва, а также возможное другие опасные последствия. Не подключайте аккумулятор к зарядному устройству, если не подключите другое устройство. Не подключайте зарядное устройство к аккумулятору, если не подключите его к зарядке.	Условия гарантии изделия торговой марки Accessstyle. 1. Все никаких условий гарантии действуют в рамках действующего законодательства Российской Федерации, регулирующего вопросы защиты прав потребителей. 2. Гарантийный срок изделия начинается с момента покупки и составляет 24 месяца с момента покупки. 3. Срок службы изделия составляет 2 (два) года и исчисляется с даты покупки или при ее отсутствии с даты производства.
		ID Name 1 Power button 2 Display 3 USB Output 4 USB Type-C 5 Micro USB Input	Function Press once to power the Power Bank on. Press twice to power the Power Bank off. Indicates the Power Bank's charge level in percent. Charges your devices from the Power Bank. For charging the Power Bank, or charging your devices from the Power Bank. For charging the Power Bank.	Power on/off The Power Bank charge level is shown on the display (in percent).	Charging status indication The Power Bank charge level is shown on the display (in percent).	Do not leave a fully charged battery connected to a charger as overcharging may shorten its lifetime. The battery runs down if used continuously. Note: Please kindly set the Power Bank on charge when the battery charge level is less than 20%, when the device is fully charged, "100%" symbol will appear on its display. The Power Bank has a protection triggering when overcharged, deeply discharged as well as in cases of short circuit or overheat.	Charging your devices from the Power Bank Please use only the original cable to charge your devices from the Power Bank. To switch on the Power Bank, connect one end of the charging cable to the Power Bank output port, and the other end to the input port of your device (Apple or Android). Power Bank supports quick charge protocol and can be charged quicker than usual if connected with a quick charge compatible cable to quick charge compatible power adapter; when quick charge is active, symbol "PD" on display appears.	Indication of charge connecting/disconnecting The indication will automatically turn on after connecting a device to the Power Bank. The indication will turn off in 35 seconds after a device is disconnected from the Power Bank or when it is connected.	Replacing the Power Bank on charge if it does not respond when you press buttons or connect it to other devices. * a power adapter is not supplied with the Power Bank and should be purchased separately!	Do not leave a fully charged battery connected to a charger as overcharging may shorten its lifetime. The battery runs down if used continuously. Note: Please kindly set the Power Bank on charge when the battery charge level is less than 20%, when the device is fully charged, "100%" symbol will appear on its display. The Power Bank has a protection triggering when overcharged, deeply discharged as well as in cases of short circuit or overheat.
		ID Name 9 10	Function Connect one end of the charging cable to a power supply, a power adapter* or a PC/USB port. The other end should be connected to one end of the charging cable to the Power Bank output port. Connect one end of the charging cable to the Power Bank output port, and the other end to the input port of your device (Apple or Android). Power Bank supports quick charge protocol and can be charged quicker than usual if connected with a quick charge compatible cable to quick charge compatible power adapter; when quick charge is active, symbol "PD" on display appears.	Safety notices: The device is powered by a battery. Improper use of the battery may cause fire, explosion or other hazards. Please kindly use the battery in a proper way. Do not disassemble, open, bend, puncture, affect the battery, incinerate or expose the battery to water. The battery may catch fire when damaged. In the event of battery leak, flush the affected area with clean water and seek medical help immediately. In case the battery smells burnt, do not place away from open flames. Use of a damaged battery may cause severe injuries. Do not swallow! Keep away from children!	Power on/off To switch on the Power Bank click the power button or connect your device to the Power Bank to charge. To switch off the Power Bank, click the power button twice. The Power Bank will also switch off automatically in 35 seconds if no other device is connected.	Charging status indication The Power Bank charge level is shown on the display (in percent).	Do not leave a fully charged battery connected to a charger as overcharging may shorten its lifetime. The battery runs down if used continuously. Note: Please kindly set the Power Bank on charge when the battery charge level is less than 20%, when the device is fully charged, "100%" symbol will appear on its display. The Power Bank has a protection triggering when overcharged, deeply discharged as well as in cases of short circuit or overheat.	Charging your devices from the Power Bank Please use only the original cable to charge your devices from the Power Bank. To switch on the Power Bank, connect one end of the charging cable to the Power Bank output port, and the other end to the input port of your device (Apple or Android). Power Bank supports quick charge protocol and can be charged quicker than usual if connected with a quick charge compatible cable to quick charge compatible power adapter; when quick charge is active, symbol "PD" on display appears.	Indication of charge connecting/disconnecting The indication will automatically turn on after connecting a device to the Power Bank. The indication will turn off in 35 seconds after a device is disconnected from the Power Bank or when it is connected.	Replacing the Power Bank on charge if it does not respond when you press buttons or connect it to other devices. * a power adapter is not supplied with the Power Bank and should be purchased separately!
		ID Name 11	Function TYPE-C INPUT MICRO INPUT	Safety notices: The device is powered by a battery. Improper use of the battery may cause fire, explosion or other hazards. Please kindly use the battery in a proper way. Do not disassemble, open, bend, puncture, affect the battery, incinerate or expose the battery to water. The battery may catch fire when damaged. In the event of battery leak, flush the affected area with clean water and seek medical help immediately. In case the battery smells burnt, do not place away from open flames. Use of a damaged battery may cause severe injuries. Do not swallow! Keep away from children!	Power on/off To switch on the Power Bank click the power button or connect your device to the Power Bank to charge. To switch off the Power Bank, click the power button twice. The Power Bank will also switch off automatically in 35 seconds if no other device is connected.	Charging status indication The Power Bank charge level is shown on the display (in percent).	Do not leave a fully charged battery connected to a charger as overcharging may shorten its lifetime. The battery runs down if used continuously. Note: Please kindly set the Power Bank on charge when the battery charge level is less than 20%, when the device is fully charged, "100%" symbol will appear on its display. The Power Bank has a protection triggering when overcharged, deeply discharged as well as in cases of short circuit or overheat.	Charging your devices from the Power Bank Please use only the original cable to charge your devices from the Power Bank. To switch on the Power Bank, connect one end of the charging cable to the Power Bank output port, and the other end to the input port of your device (Apple or Android). Power Bank supports quick charge protocol and can be charged quicker than usual if connected with a quick charge compatible cable to quick charge compatible power adapter; when quick charge is active, symbol "PD" on display appears.	Indication of charge connecting/disconnecting The indication will automatically turn on after connecting a device to the Power Bank. The indication will turn off in 35 seconds after a device is disconnected from the Power Bank or when it is connected.	Replacing the Power Bank on charge if it does not respond when you press buttons or connect it to other devices. * a power adapter is not supplied with the Power Bank and should be purchased separately!
		ID Name 12 13	Function TYPE-C OUTPUT USB OUTPUT	Safety notices: The device is powered by a battery. Improper use of the battery may cause fire, explosion or other hazards. Please kindly use the battery in a proper way. Do not disassemble, open, bend, puncture, affect the battery, incinerate or expose the battery to water. The battery may catch fire when damaged. In the event of battery leak, flush the affected area with clean water and seek medical help immediately. In case the battery smells burnt, do not place away from open flames. Use of a damaged battery may cause severe injuries. Do not swallow! Keep away from children!	Power on/off To switch on the Power Bank click the power button or connect your device to the Power Bank to charge. To switch off the Power Bank, click the power button twice. The Power Bank will also switch off automatically in 35 seconds if no other device is connected.	Charging status indication The Power Bank charge level is shown on the display (in percent).	Do not leave a fully charged battery connected to a charger as overcharging may shorten its lifetime. The battery runs down if used continuously. Note: Please kindly set the Power Bank on charge when the battery charge level is less than 20%, when the device is fully charged, "100%" symbol will appear on its display. The Power Bank has a protection triggering when overcharged, deeply discharged as well as in cases of short circuit or overheat.	Charging your devices from the Power Bank Please use only the original cable to charge your devices from the Power Bank. To switch on the Power Bank, connect one end of the charging cable to the Power Bank output port, and the other end to the input port of your device (Apple or Android). Power Bank supports quick charge protocol and can be charged quicker than usual if connected with a quick charge compatible cable to quick charge compatible power adapter; when quick charge is active, symbol "PD" on display appears.	Indication of charge connecting/disconnecting The indication will automatically turn on after connecting a device to the Power Bank. The indication will turn off in 35 seconds after a device is disconnected from the Power Bank or when it is connected.	Replacing the Power Bank on charge if it does not respond when you press buttons or connect it to other devices. * a power adapter is not supplied with the Power Bank and should be purchased separately!
		ID Name 14 15	Function TYPE-C INPUT MICRO INPUT	Safety notices: The device is powered by a battery. Improper use of the battery may cause fire, explosion or other hazards. Please kindly use the battery in a proper way. Do not disassemble, open, bend, puncture, affect the battery, incinerate or expose the battery to water. The battery may catch fire when damaged. In the event of battery leak, flush the affected area with clean water and seek medical help immediately. In case the battery smells burnt, do not place away from open flames. Use of a damaged battery may cause severe injuries. Do not swallow! Keep away from children!	Power on/off To switch on the Power Bank click the power button or connect your device to the Power Bank to charge. To switch off the Power Bank, click the power button twice. The Power Bank will also switch off automatically in 35 seconds if no other device is connected.	Charging status indication The Power Bank charge level is shown on the display (in percent).	Do not leave a fully charged battery connected to a charger as overcharging may shorten its lifetime. The battery runs down if used continuously. Note: Please kindly set the Power Bank on charge when the battery charge level is less than 20%, when the device is fully charged, "100%" symbol will appear on its display. The Power Bank has a protection triggering when overcharged, deeply discharged as well as in cases of short circuit or overheat.	Charging your devices from the Power Bank Please use only the original cable to charge your devices from the Power Bank. To switch on the Power Bank, connect one end of the charging cable to the Power Bank output port, and the other end to the input port of your device (Apple or Android). Power Bank supports quick charge protocol and can be charged quicker than usual if connected with a quick charge compatible cable to quick charge compatible power adapter; when quick charge is active, symbol "PD" on display appears.	Indication of charge connecting/disconnecting The indication will automatically turn on after connecting a device to the Power Bank. The indication will turn off in 35 seconds after a device is disconnected from the Power Bank or when it is connected.	Replacing the Power Bank on charge if it does not respond when you press buttons or connect it to other devices. * a power adapter is not supplied with the Power Bank and should be purchased separately!
		ID Name 16 17	Function TYPE-C INPUT MICRO INPUT	Safety notices: The device is powered by a battery. Improper use of the battery may cause fire, explosion or other hazards. Please kindly use the battery in a proper way. Do not disassemble, open, bend, puncture, affect the battery, incinerate or expose the battery to water. The battery may catch fire when damaged. In the event of battery leak, flush the affected area with clean water and seek medical help immediately. In case the battery smells burnt, do not place away from open flames. Use of a damaged battery may cause severe injuries. Do not swallow! Keep away from children!	Power on/off To switch on the Power Bank click the power button or connect your device to the Power Bank to charge. To switch off the Power Bank, click the power button twice. The Power Bank will also switch off automatically in 35 seconds if no other device is connected.	Charging status indication The Power Bank charge level is shown on the display (in percent).	Do not leave a fully charged battery connected to a charger as overcharging may shorten its lifetime. The battery runs down if used continuously. Note: Please kindly set the Power Bank on charge when the battery charge level is less than 20%, when the device is fully charged, "100%" symbol will appear on its display. The Power Bank has a protection triggering when overcharged, deeply discharged as well as in cases of short circuit or overheat.	Charging your devices from the Power Bank</b		